



# Руководство по монтажу


## HRB, HRE, HFE

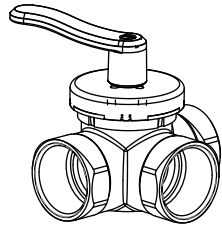


HRB 3, HRB 4 (Д, 15-50)  
HRE 3, HRE 4 (Д, 20-50)

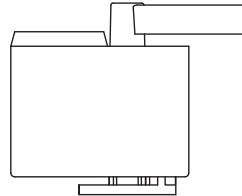






AMB 162/182

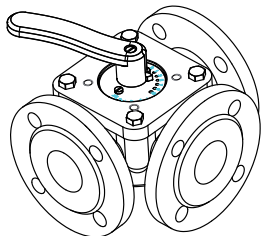

HFE 3 (Д, 20-150)



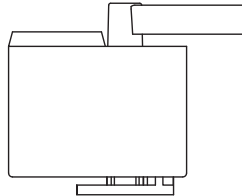


AMB 162/182

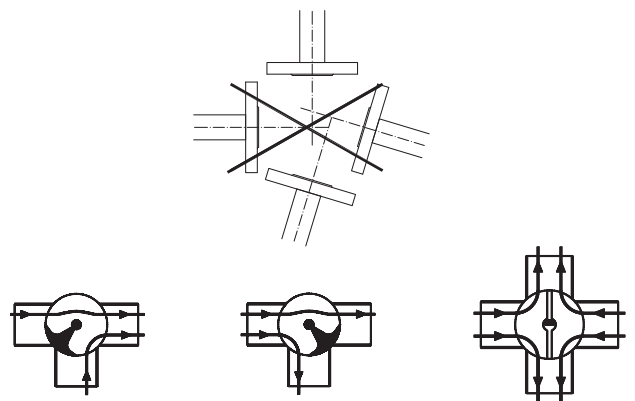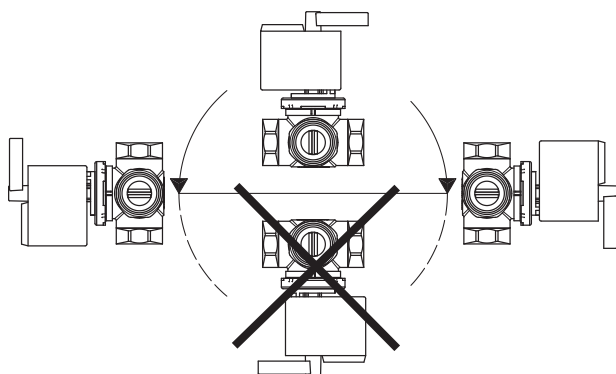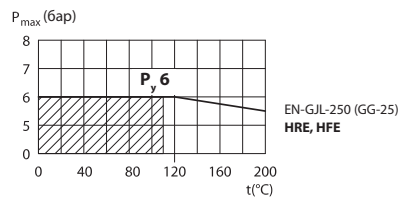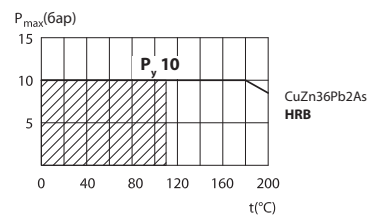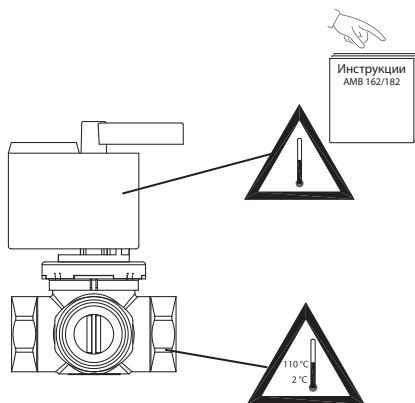


Руководство по монтажу HRB, HRE, HFE

HRB, HRE

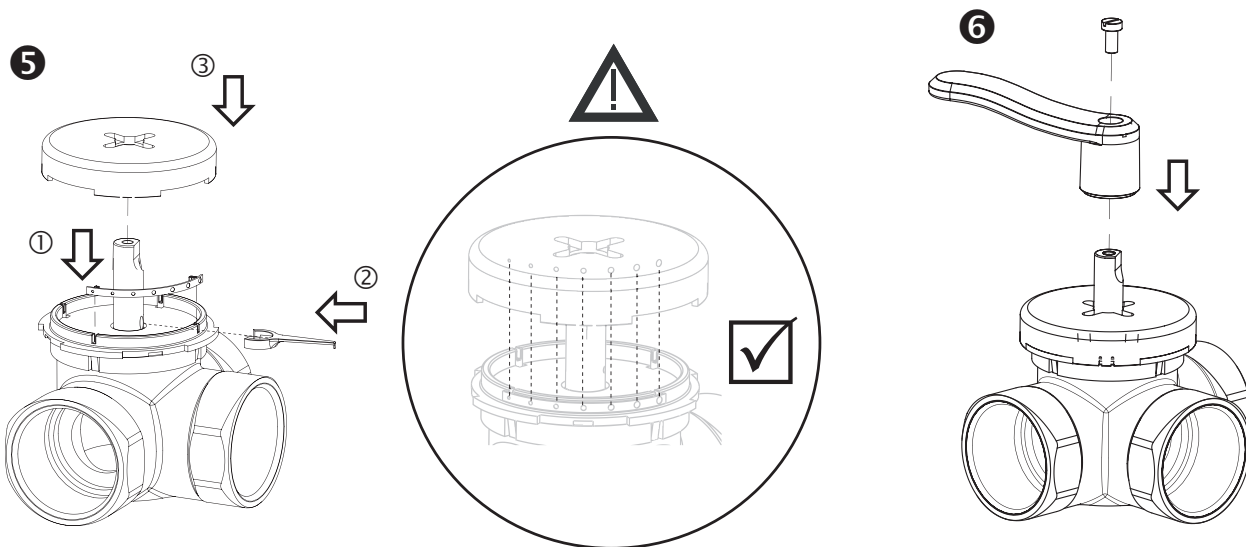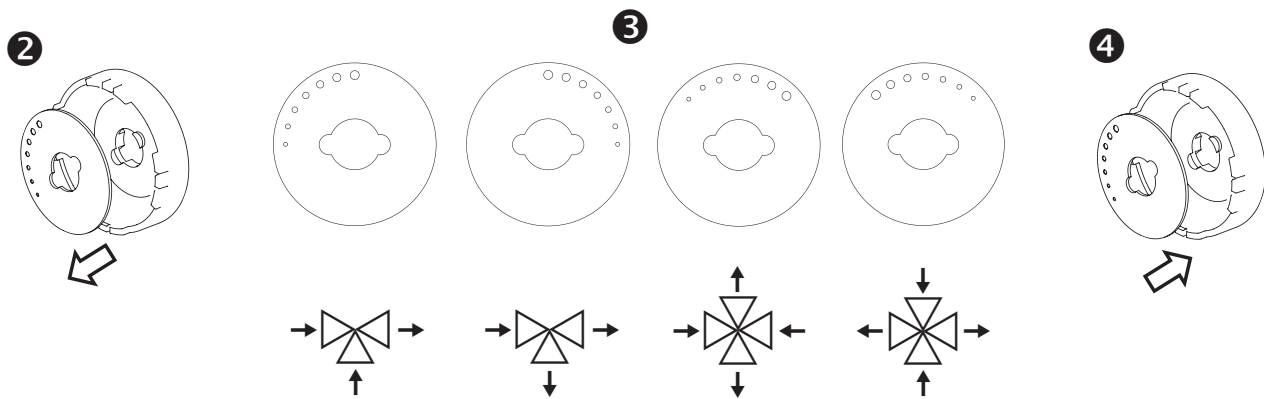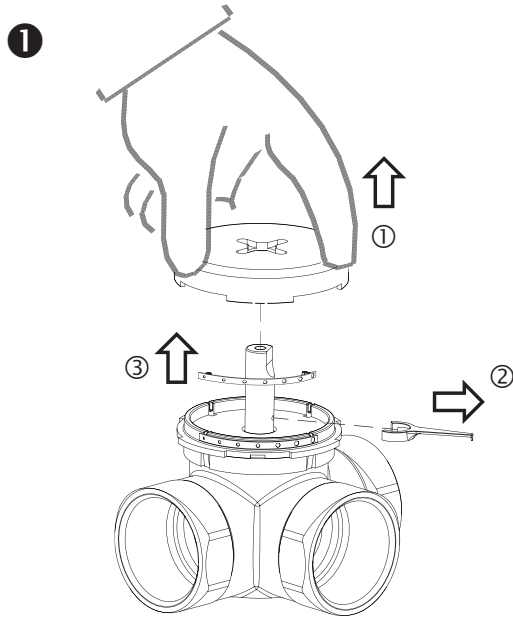


# Руководство по монтажу HRB, HRE, HFE

HFE

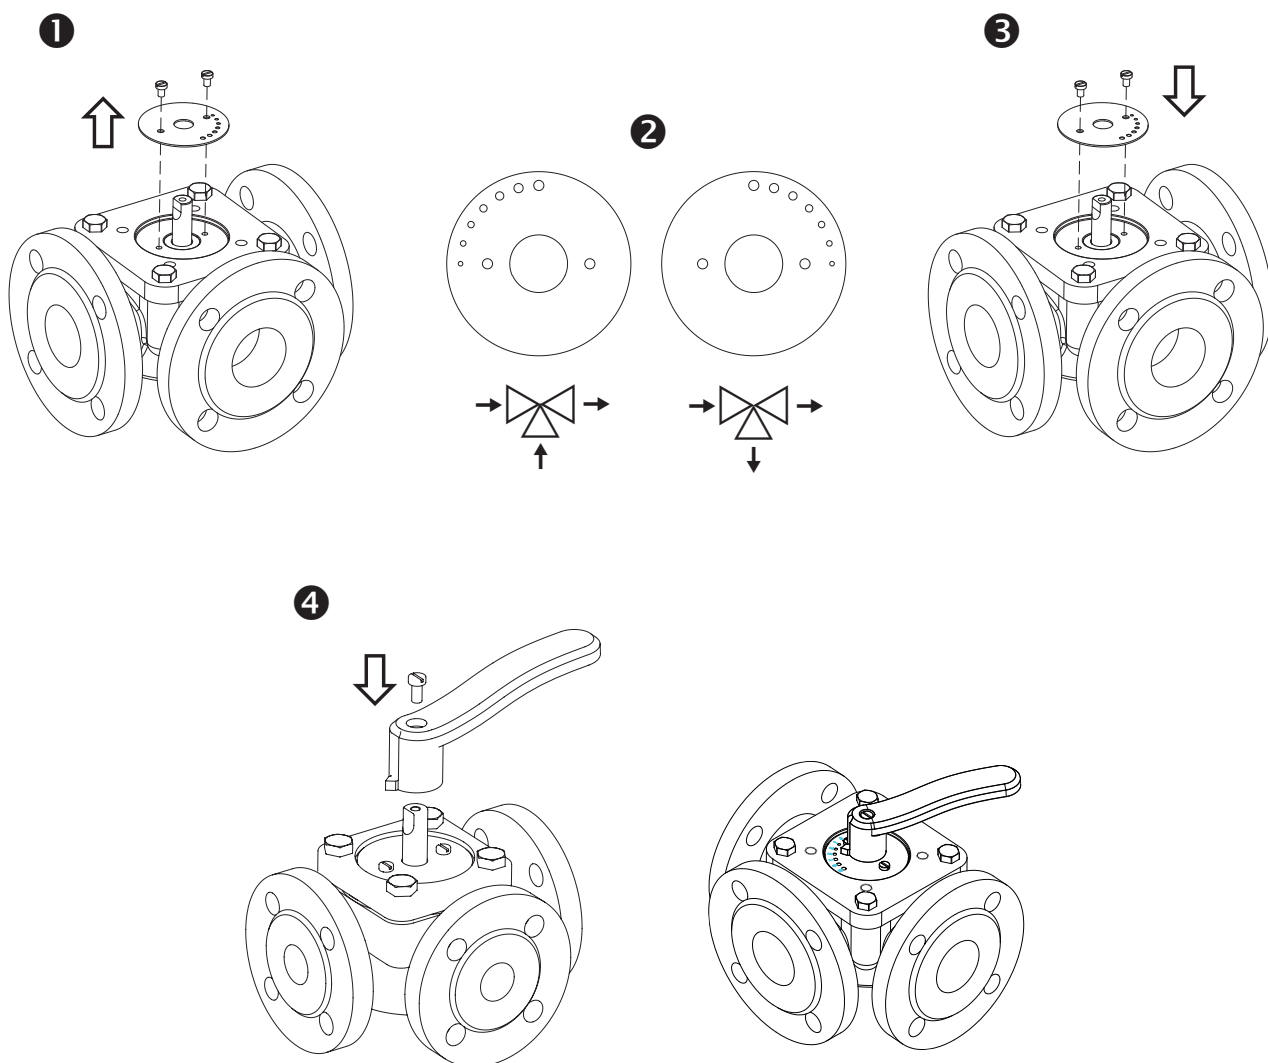


# Руководство по монтажу HRB, HRE, HFE

## HRB 3, HRE 3

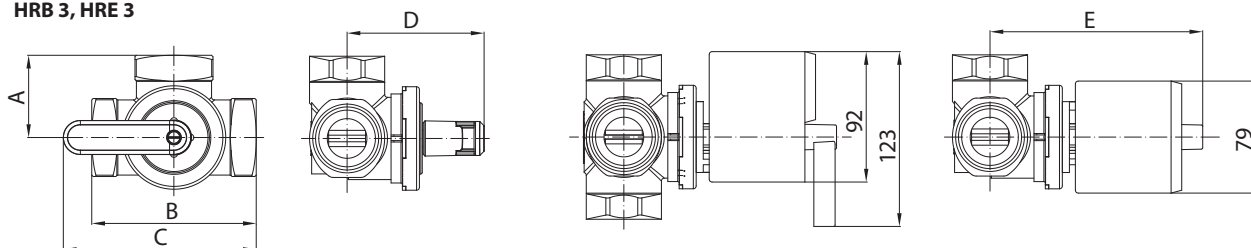

## HRB 4, HRE 4

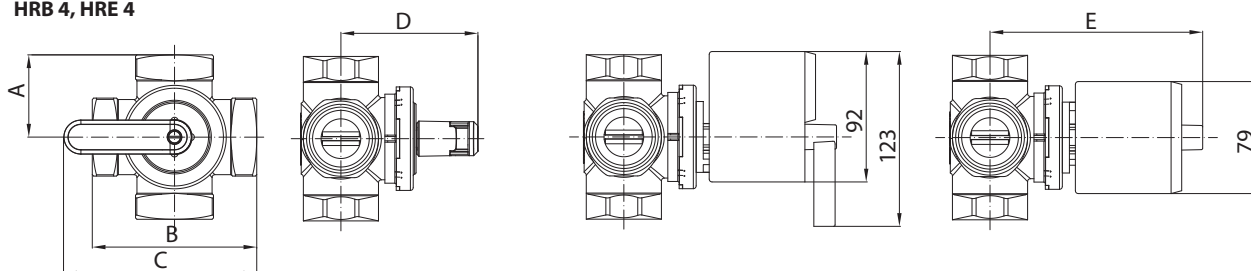


## HRB 3, HRB 4

D <sub>y</sub> мм	A	B	C	D	E	Соединение	Электропривод
	мм						
15	36	72	114	88	143	Rp 1/2"	AMB 162 AMB 182
20	36	72	114	88	143	Rp 3/4"	
25	41	82	119	92	147	Rp 1"	
32	47	94	125	97	152	Rp 1 1/4"	
40	58	116	136	97	152	Rp 1 1/2"	
50	62,5	125	140,5	103	158	Rp 2"	

## HRE 3, HRE 4

D <sub>y</sub> мм	A	B	C	D	E	Соединение	Электропривод
	мм						
20	52.5	105	130.5	88	143	Rp 3/4"	AMB 162 AMB 182
25	54	108	132	92	147	Rp 1"	
32	57.5	115	135.5	102	157	Rp 1 1/4"	
40	60	120	138	102	157	Rp 1 1/2"	
50	78	156	156	108	163	Rp 2"	

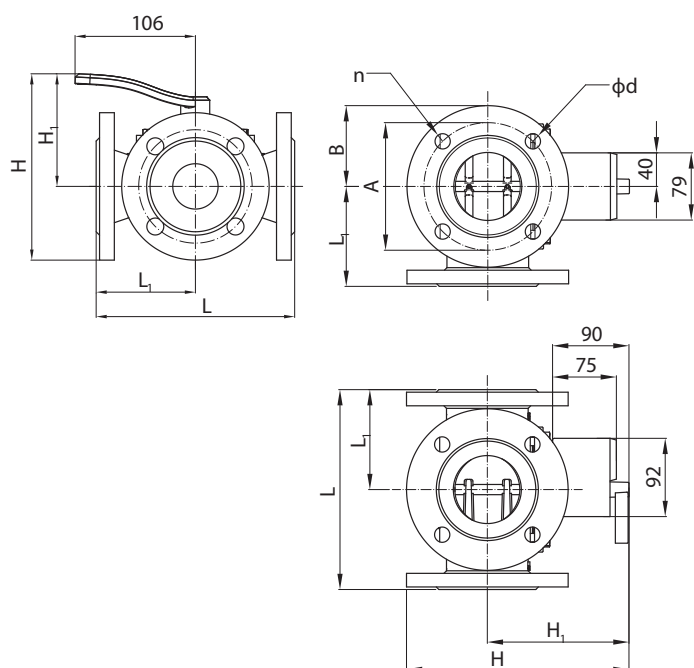

## HFE 3

D <sub>y</sub> мм	H	H1	L	L1	B	DC	φd	n	Электропривод
	мм								
20	131	140	140	70	45	65	11,5	4	AMB 162 AMB 182
25	136	140	150	75	50	75	11,5	4	
32	152	146	160	80	60	90	15	4	
40	157	146	175	88	65	100	15	4	
50	171	155	195	98	70	110	15	4	
65	181	155	200	100	80	130	15	4	
80	208	167	235	118	95	150	18	4	
100	228	177	265	133	105	170	18	4	
125	253	187	300	150	120	200	18	8	
150	271	192	350	175	133	225	18	8	